


Thermometer Operation

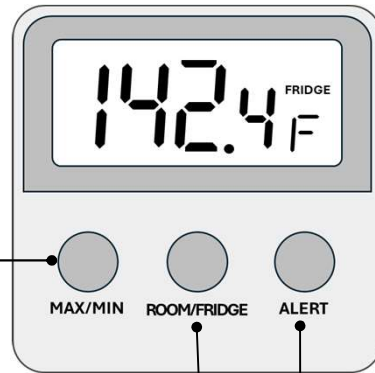

MIN/MAX

Momentarily view Minimum and Maximum temperature reached during treatment. Press and Hold to Reset

**IMPORTANT: ROOM/FRIDGE

Set to "Fridge" to monitor Ranger temperature.

Celsius / Fahrenheit

Red button located on the back of the unit. Press to select °C or °F.


ALERT

To Set the Alarm Temperature –

- First, press and hold ALERT button for 3 seconds. The thermometer will flash the "HI-ALARM" and temperature.
- Second, press and hold the "C/F" button on the back of the thermometer to set a temperature for either 120°F or 49°C.
- Wait 10 seconds to save the alarm temperature

To Turn the Alarm On / Off

- Press the ALERT button to turn the alarm on or off. The display will show the "AL" in the corner when the alarm is set.
- The alert will beep once the temperature has reached the set temperature.
- Press the button again to stop the beeping.

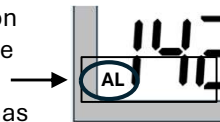

BATTERIES (included)

The unit ships with a AAA battery behind the door on the back of the unit. **Protective wrap must be removed from battery before use.** Typical Battery Life is 2+ years.

Select Celsius or Fahrenheit

Located on the back of the unit. Press to select °C or °F.

USING THE THERMOMETER FOR HEAT TREATMENT

- Try to treat similar loads – like all fabrics, bedding, or books.
- The probe should be placed as close to the center of the items being treated as possible.
- For a complete treatment we recommend either:
 - Set the alarm temperature for 120°F / 49°C and treating items for an additional 30 minutes
 - Set the alarm for 125°F and stopping operation once the alarm signals
 - Let the Ranger run for the 8-hour treatment time
Note: some items such as shoes and electronics may be sensitive to prolonged temperatures above 140°F.
- If the screen reads "HHH", this indicates that the temperature has reached over 155°F and treatment is complete. This is within the maximum operating range of the Ranger.

Additional Guidelines for Battery Products

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Compatible battery type AAA / Nominal Voltage 1.5V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (70C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.